
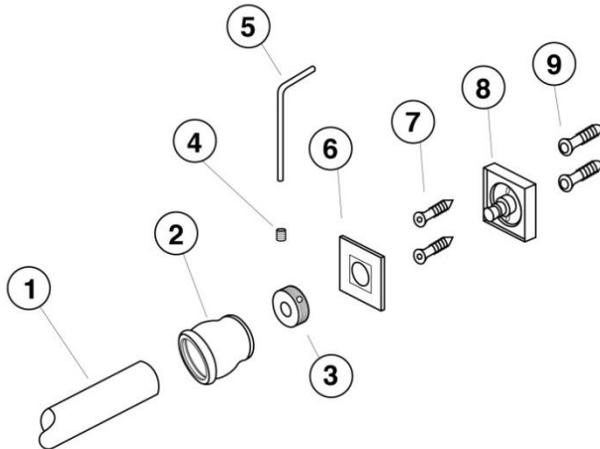


Installation Guidelines

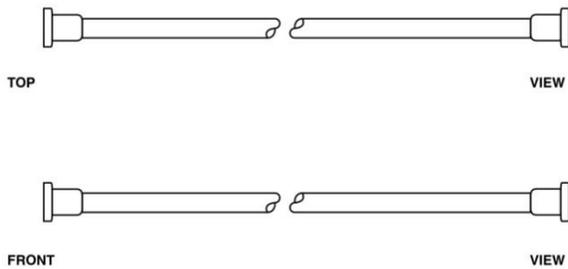

Cubis Plus

PART NO.	DESCRIPTION	QTY
1	Shower Rod	1
2	Mounting adapter	2
3	Collar (in some cases, reverse collar)	2
4	Set Screw	2
5	Hex Key	1
6	Escutcheon	2
7	Screw, Slotted, #8, 1 1/4" Length	4
8	Mounting plate	2
9	Anchor	4

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to all applicable codes.
- This product must be installed by a professional contractor.
- Refer to the specifications and assembly drawings attached.
- Inspect this product to assure it is the correct model and that you have all parts required for proper installation.
- Take all necessary precautions to ensure the tub is protected during installation.

SHOWER ROD INSTALLATION:

1. Install the mounting plates (8) at the desired location using the screws (7) and anchors (9) provided. Drill 3/16" holes in drywall or 1/4" in tile.
 2. Slide the escutcheon (6) and mounting adapter (2) over each mounting plate and tighten the set screw (4).
 3. Cut the shower rod (1) length to 1/16" less than the distance between the adapters. Remove the burrs from the cut end of the rod.
 4. Slide the O-ring end of the collar (3) over the rod until the rod protrudes slightly from the other end of the collars.
 5. Position the rod (1) and collar (3) between the adapters (2) then thread the collars down until they contact the escutcheon (6).
- If further assistance is required, please contact Customer Service at 1-888 825-7266 (9am-5pm EST).

These guidelines have been prepared for the professional contractor to aid in the installation. All dimensions are based on original specifications and are subject to change and variation. Please consult your Design Associate for current specifications.

